

Instructions for Installing Colline Panels

What Do You Need?

Spray contact adhesive (**the only one recommended by Acustio: Spray-Kon 200**), masking tape, cardboard to protect surfaces, adhesive tape, gloves, mask, spirit level.

Before You Start make sure the walls have been properly prepared.

- The walls must be covered with a deep-penetrating primer at least 24 hours before installation. Raw walls should be primed. Painted walls must also be primed by applying the primer directly onto the paint.
- The wall must be dusted and prepared for gluing the Basalt panels. After this stage, no renovation work should be carried out that could affect the quality of the adhesive bond between the panels and the surface. This is crucial for the durability of the installation.
- The surface where the panels will be installed must be perfectly flat — free from any depressions or protrusions.
- Remove all electrical outlets, switches, etc., leaving only the insulated cables.
- Remove TV mounts and other types of installations.
- If skirting boards are included in the project, they should be installed. If this is not possible, provide a skirting board template and specify its exact dimensions.
- The room where the work will be carried out should be clean and tidy. There should be no items hindering the panel installation on the wall, such as desks, furniture, etc., which could obstruct movement.
- Only one installation team should be working in the room during the panel installation.

Before Installation

Familiarize yourself with the project according to which you will be installing the Colline panels. Pay attention to critical areas, such as outlets and switches, remembering that they must not be located where the panels will be glued.


In the Colline Panel Collection, you can only cut elements in the flat, three-layered felt section. Absolutely do not cut anything in the convex parts of the panel, known as the "bumps," which are the soft elements. Also, make sure to maintain at least a 2 cm gap from the edge of the convex element when cutting the flat part of the panel.

Tip: Lay out all the Colline panels on the floor in the order specified in the project and check how the composition fits together. Remember, all tasks should be completed before gluing, on a flat surface.

Properly secure your workspace to avoid making a mess. Also, take care of your safety — wear gloves and a mask before starting the work.



1. Use a spirit level to mark the line for panel installation and determine the starting point for laying them.

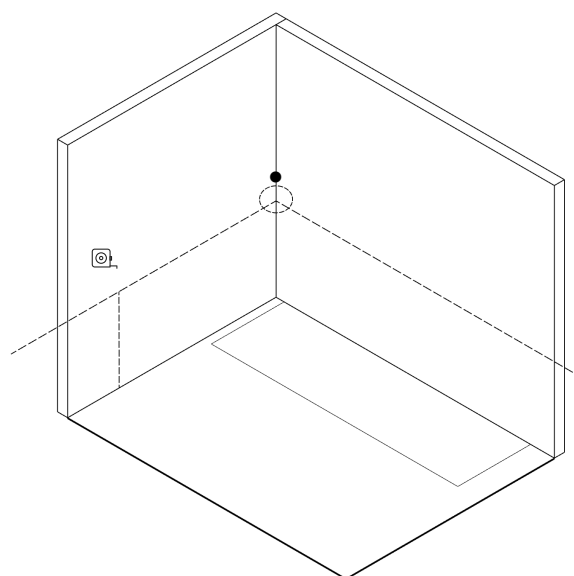

* Once you are sure that everything has been done correctly and you have reviewed the project, you can begin gluing the panels. It is important to press the panels firmly against the wall and against each other — ensuring they adhere as much as possible. The pressure applied is very important — try to do this as strongly as possible. The timing is also crucial — press each panel for at least 30 seconds.

Instructions for Installing Colline Panels

Remember to alternate between applying the adhesive and gluing the panels to the wall.

Apply the contact adhesive evenly to the panel (first, cover the entire surface) → Apply an additional layer of contact adhesive (on the edges of the panel – about 10 cm around) → Apply the contact adhesive to the wall in the same way → Attach the panel to the wall.


Repeat these steps for each panel in the same order.

How to Apply Adhesive to the Panel


*Remember to properly protect the surrounding area to avoid making a mess. Also, take care of your safety – wear gloves and a mask before starting the work.




1. Prepare the panel – protect it around the edges with masking tape to prevent the spray adhesive from staining the front of the product.

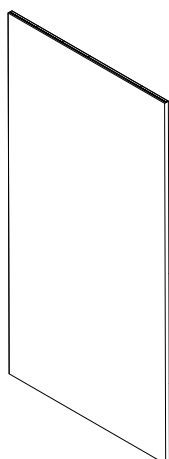

2. Apply the contact adhesive evenly to the panel – cover the entire surface. Do this precisely, as it is crucial. Remember, the contact adhesive must also be applied to the wall surface – exactly the same way as on the panel.

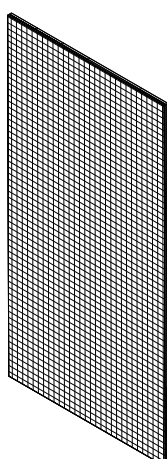

3. Apply the contact adhesive evenly to the edges of the panel (about 10 cm around). It is important to spread it uniformly.

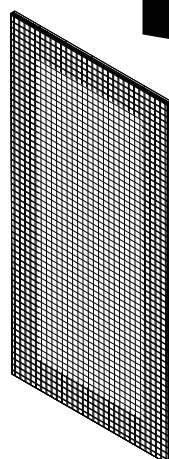

4. Remove the masking tape before attaching the panel to the wall.



The most important aspect of installing Colline panels is precision, both when applying the adhesive and during the actual attachment of the panels to the wall. After applying the adhesive according to the instructions above, proceed with gluing the panels to the wall. Check the surface of the wall and its flatness. If there are no issues, proceed with the installation.

Instructions for Installing Colline Panels


Gluing the Panels to the Wall




1. Apply contact adhesive to the wall – after properly applying adhesive to the panel, apply contact adhesive to the wall.

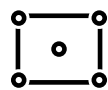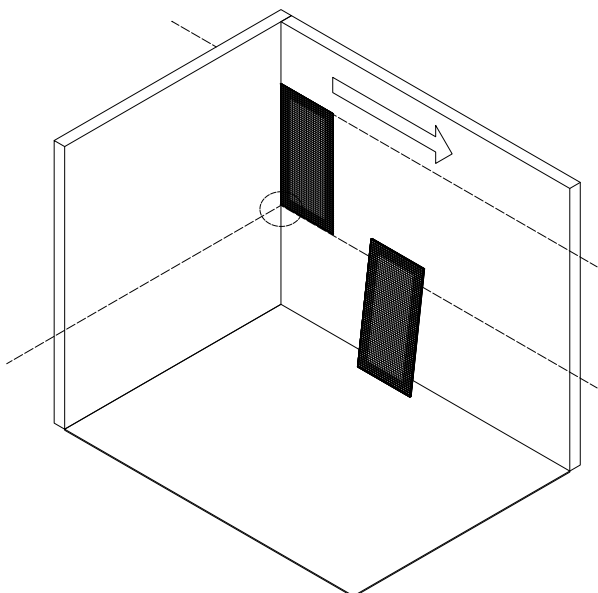

2. Attach the panels according to the project – remember to follow the correct order and maintain precision.

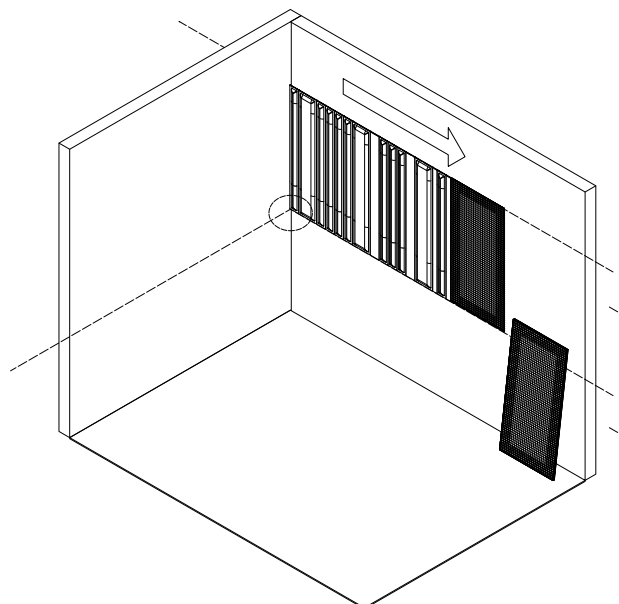

3. Trim the panel – if you have arranged the entire composition according to the project and there are elements that need trimming, remember to measure them on the wall, but cut/trim the panel on the floor before attaching it.

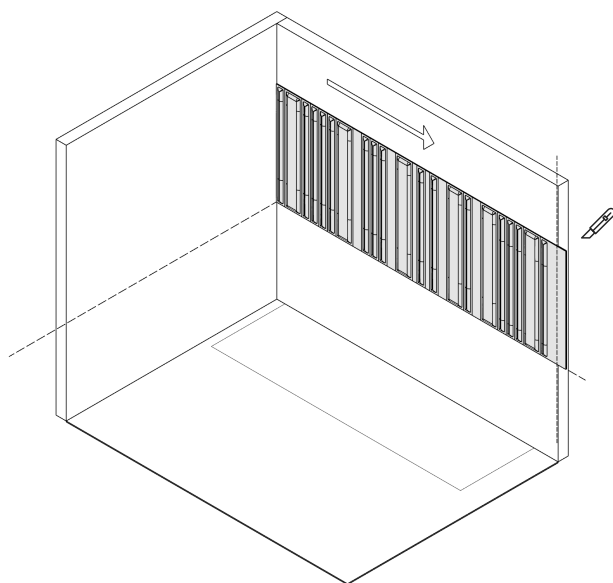

4. Installation complete – enjoy your custom composition! :)

